


Applications: thermoplastic materials.
Assembly: by pressure with expansion.

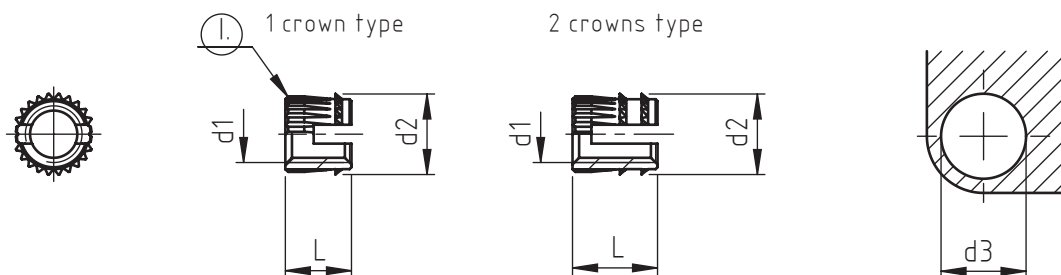

code	metric thread	crown diameter	total length	number of crowns	hole diameter *
	d1	d2	L	n°	d3
M. 2 C.03,5 (1)	M 2	4	3,5	1	3,2
M. 2,5 C.04 (1)	M 2,5	4,5	4	1	3,5
M. 3 C.04	M 3	5,6	4	1	4,7
M. 3 C.05			5	1	
M. 3 E.08			8	2	
M. 3 D.09,5			9,5	2	
M. 3,5 C.05	M 3,5	6	5	1	5,1
M. 3,5 E.08			8	2	
M. 3,5 D.09,5			9,5	2	
M. 4 C.05	M 4	6,6	5	1	5,6
M. 4 E.08			8	2	
M. 4 D.09,5			9,5	2	
M. 5 C.06	M 5	7,6	6	1	6,8
M. 5 D.09			9	2	
M. 6 C.07	M 6	8,6	7	1	7,7
M. 6 D.09			9	2	
M. 8 D.10	M 8	10,6	10	2	9,6

Non binding dimensions, expressed in mm.

(1) The upper bevel angle is not usually provided for M 2 e M 2,5 threads.

* In order to use correctly the products, we suggest to carry out some preliminary assembly tests to determine the right hole.

Use screws of suitable length in order to make use of the whole thread of the bush.

Standard

On demand

Not manufactured

Material: brass
Finishing: natural
Tolerances: ISO 2768 - m
Threading d1: ISO 6 H
Example: threaded expansion bushing, M5 thread,
9 mm length, brass: M. 5 D.09

